




1. Typical Detail of Hardstanding (eg. Bioplant) - No Liner

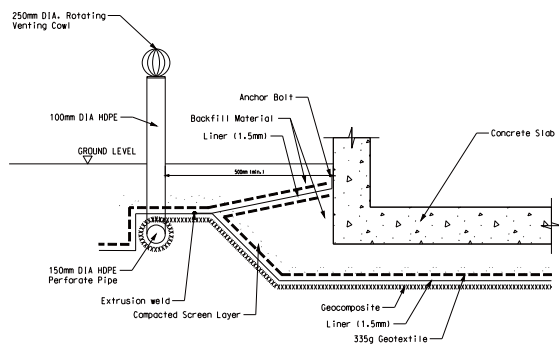


2. Occupied Office Building + Closed Buildings - Liner Protection

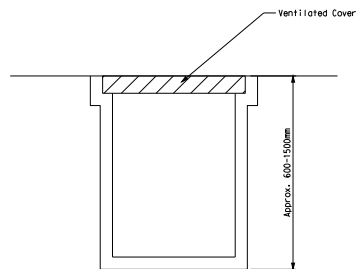


4. Utility Conduit - No Liner

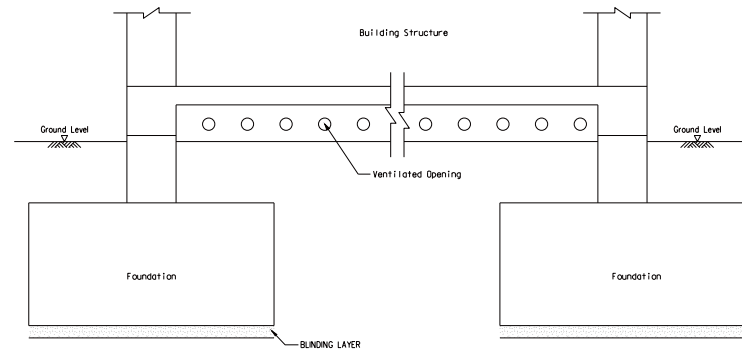

3. Open Sided Building - Raised Floor



2.3 Occupied Office Building + Closed Buildings: Coating Protection

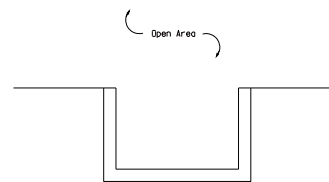

5. Shallow Open Trench

Figure 7.3

Typical Details of Gas Protection for Buildings